


USER MANUAL

Svenska, English

HAVSÖ

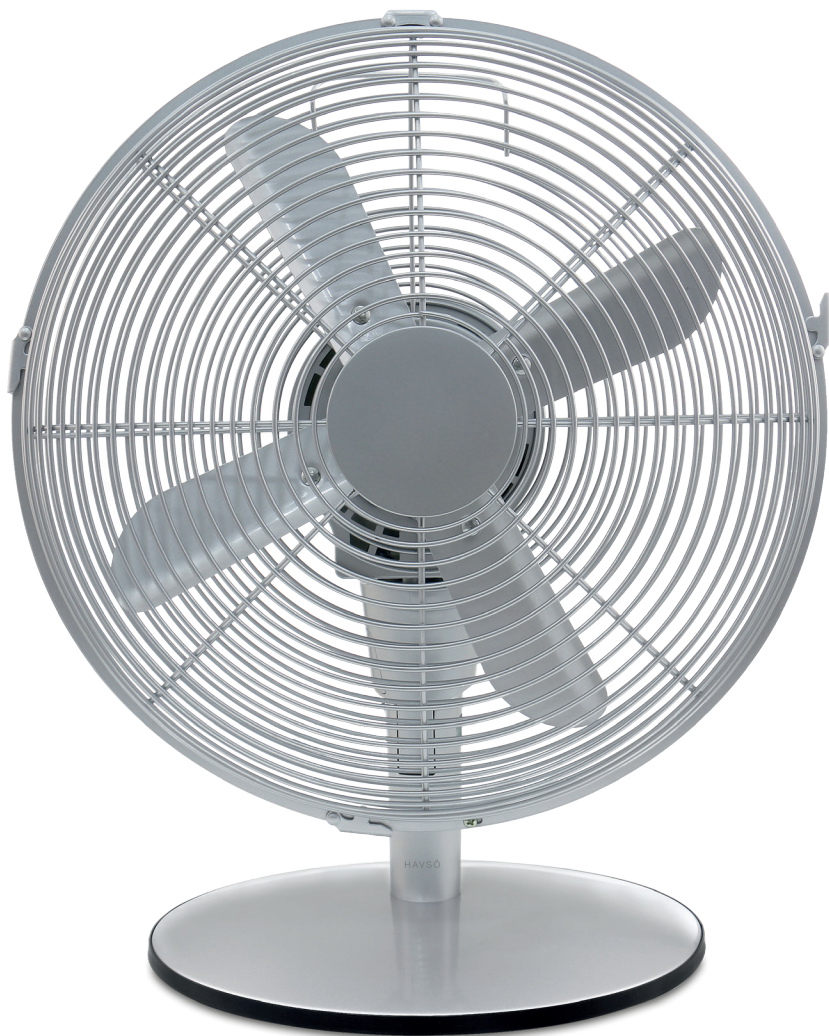

Marie 4.0

TABLE FAN

Svenska

Säkerhetsföreskrifter	4-5
Produktöversikt	6
Användning	7
Specifikationer	8
Övrig information	9

English

Safety precautions	10-11
Product overview	12
Operation	13
Specifications	14
Other information	15

SÄKERHETSFÖRESKRIFTER

Läs noggrant igenom bruksanvisningen innan du använder produkten och spara den för framtida bruk. Om du följer dessa instruktioner kommer du ha glädje av produkten länge.


- Innan du ansluter enheten: Säkerställ att ditt vägguttags spänning motsvarar den spänning som anges på produktens typskylt (typskylten är placerad på sidan av enheten).
- För att förhindra risk för elchock: Öppna aldrig höljet. Det finns inga delar som du som användare själv kan laga. Överlåt all service till kvalificerad servicepersonal.
- Reparationer av elektriska enheter får endast utföras av behörig servicepersonal. Felaktig reparation kan utsätta användaren och enheten för allvarlig fara.
- Använd inte produkten om den har en skadad kontakt eller sladd, eller efter att den tappats och skadats på något sätt. Gör du det kan det leda till elchock/personskador eller skador på egendom.
- Om strömsladden är skadad måste den ersättas av tillverkaren, dess serviceagent eller liknande kvalificerad servicepersonal för att undvika fara.
- Koppla inte från enheten genom att dra i sladden, dra i kontakten. Annars kan sladden eller enheten skadas.
- Tryck inte in föremål i några öppningar på enheten då skada på enheten och/eller elchock kan uppstå.
- Använd inte enheten till annat än det den är avsedd för.
- Sänk inte ned enheten i vatten eller annan vätska.
- Koppla alltid från enheten innan du utför rengöring och underhåll.
- Placera inte enheten nära värmeavgivande produkter, eller i direkt solljus.
- Använd inte enheten utomhus.
- Denna utrustning får inte användas av personer (inklusive barn) med nedsatt känsel, fysisk eller mental förmåga eller har bristfällig erfarenhet eller kunskap. De ska ha lämplig tillsyn och ges tillräckliga instruktioner från en person som ansvarar för deras säkerhet, för att få använda utrustningen.

SÄKERHETSFÖRESKRIFTER

- Lämna aldrig enheten i närheten av barn. Produkten är ingen leksak! Noggrann tillsyn krävs när produkten används i närheten av barn.
- Placera alltid fläkten på en plan och stabil yta.
- Använd inte fläkten i närheten av bad, duschar eller andra våta utrymmen.
- Lägg inte något på fläkten när den är igång. Detta för att undvika överhettning.
- Använd inte fläkten tillsammans med en timer, fjärrstyrningsprogram eller annan produkt som kan stänga av eller på fläkten.
- Barn under åtta år bör bara få stänga av och sätta på fläkten under förutsättning att de fått tydliga instruktioner av en vuxen. De bör inte få sätta in och ta ut sladden från eluttaget eller rengöra fläkten.
- Se till att fläkten är korrekt monterad innan den ansluts till eluttaget.
- Stoppa aldrig in fingrarna eller andra föremål genom fläktens gallerskydd.

PRODUKTÖVERSIKT

- | | |
|----------------------|--------------------|
| 1. Främre galler | 7. Strömbrytare |
| 2. Bladmutter | 8. Motorhus |
| 3. Blad | 9. Fot |
| 4. Skyddsmutter | 10. Mutter |
| 5. Bakre galler | 11. Säkerhetsskruv |
| 6. Oscilleringsknapp | |

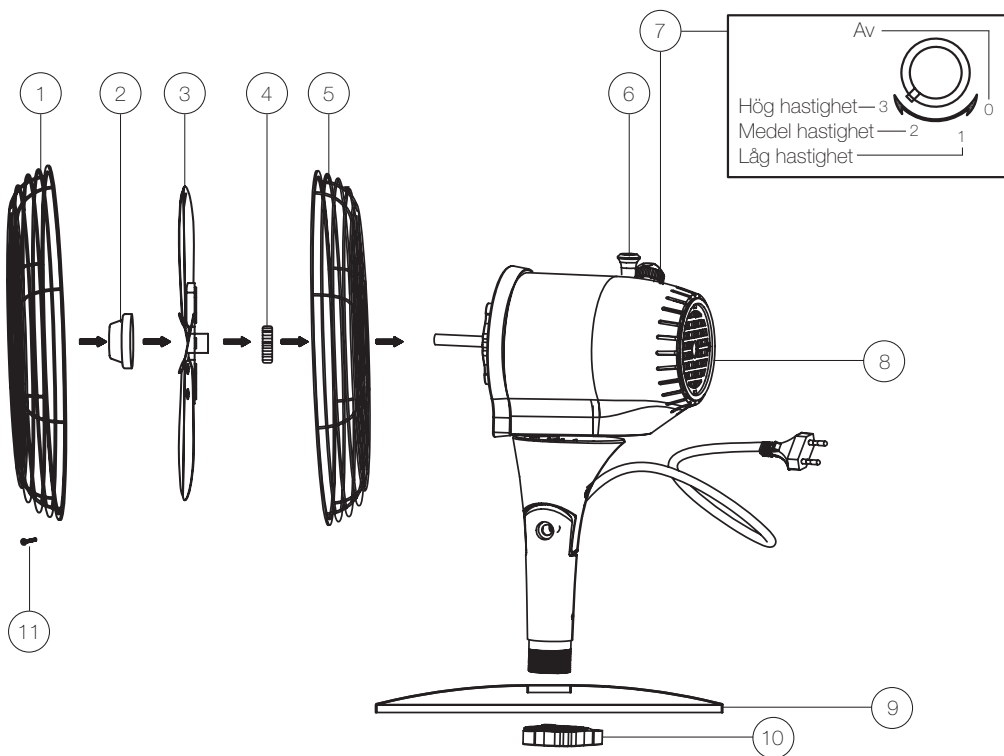

1. Plocka upp motorhuset (8) och ta bort muttern (10) ur stängen. Sätt stängen i hålet på basen (9), fäst sedan allt med muttern (10).
2. Ta bort bladmuttern (2) och skyddsmuttern (4) från motoraxeln. Montera det bakre gallret (5) på motorhuset (8) och fixera sedan allt med skyddsmuttern (4).
3. Montera bladet (3) på motoraxeln och säkra den med bladmuttern (2).
4. Placera det främre gallret (1) på det bakre gallret (5). Fäst sedan med skyddsklämmorna och dra åt säkerhetsskraven (11).
5. Nu är du redo att använda fläkten!

ANVÄNDNING

Användning

1. Anslut kontakten till ett eluttag (220-240 V AC, 50 Hz).
2. Vrid reglaget (7) till önskat luftflöde.
 - 1: Låg hastighet
 - 2: Medelhastighet
 - 3: Hög hastighet
 - 0: Av
3. Tryck på oscilleringsknappen om du vill att fläkthuvudet ska oscillera. Dra upp oscilleringsknappen om du vill att luftflödet strömmar från en fast position.
4. Luftflödet kan justeras uppåt eller nedåt genom att enkelt flytta motorhuset upp eller ner.

Rengöring

- Stäng alltid av och koppla från fläkten från eluttaget innan du rengör den.
Varning! Efter att du monterat fläkten: Ta aldrig av gallren för rengöring eller annat underhållsändamål.
- Använd en lätt fuktad trasa för att avlägsna smuts.
- Sänk aldrig ner fläkten i vatten eller annan vätska.
- Om fläkten inte ska användas under en längre tid: Rengör den, se till att den är torr, packa ned den i lämpligt skydd och förvara sedan torr.

SPECIFIKATIONER

Modellnummer	530055
Strömförsörjning	AC 220-240 V, 50 Hz
Effekt	45 W
Sladdlängd	1,6 m
Mått	35 x 27 x 44 cm
Vikt	3 kg

ÖVRIG INFORMATION

Miljö

Den här symbolen på produkten eller i instruktionerna betyder att den elektriska och elektroniska utrustningen ska slängas separat från annat hushållsavfall när den inte fungerar längre. Inom EU finns separata återvinningssystem för avfall. Kontakta lokala myndigheter eller din återförsäljare för mer information.



Den här symbolen på produktens förpackning innebär att materialet är återvinningsbart.



Säkerhet

Detta märke finns på produkten och i manualen för att visa att den är tillverkad enligt gällande EU-lagstiftning.



Förbehåll

Vi förbehåller oss rätten att justera eventuella tryckfel samt fortlöpande ändra och förbättra produkten och medföljande material.

SAFETY PRECAUTIONS

Read this instruction manual carefully before use and save it for future reference. If you follow these instructions, your appliance will provide you with years of good service.

- Before you connect the appliance: Ensure that the voltage rating on the type plate corresponds to your mains voltage (type plate is located on the side of the product).
- To reduce the risk of electric shock: Do not remove the cover. There are no user serviceable parts inside. Refer servicing to qualified service personnel.
- Repairs to electrical appliances shall always be performed by qualified personnel. Improper repairs may place the user and the equipment at serious risk.
- Do not operate the appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way. Doing so may cause electric shock/personal injuries and property damage may occur.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified people to avoid a hazard.
- Do not remove the appliance from the mains power supply by pulling the cord, pull the plug. Otherwise damage to the cord and appliance may occur.
- Do not push objects into any openings as damage to the equipment and/or electric shock may occur.
- Do not use the appliance for anything other than its intended use.
- Do not immerse the product in water or any other liquid.
- Always unplug the appliance after use and before any cleaning or maintenance.
- Do not place the appliance near heat emitting appliances or in direct sunlight.
- Do not use the appliance outdoors.
- The equipment is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge. They should be given


SAFETY PRECAUTIONS

appropriate supervision and instructions to use the equipment by a person responsible for their safety.

- Never leave the appliance within reach of children. The product is not a toy! Close supervision is required when using the appliance near children.
- Always put the appliance on a flat and stable surface.
- Do not use this fan in the immediate surroundings of a bath, shower or swimming pool.
- Do not cover the appliance when it is running to avoid risk of overheating.
- Do not use the appliance with a separate remote control system or any other device that switches the appliance on automatically, since a risk of fire exists if the appliance is covered or positioned incorrectly.
- Children under 8 years old should only be allowed to switch the appliance on and off provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children under 8 years old shall not plug in, regulate and clean the appliance or perform user maintenance.
- Do not connect the table fan to the mains power before it is correctly assembled. The table fan is not suitable for use outdoors, in bathrooms or in other wet or damp environments.
- Never insert fingers or other objects through the grilles protecting the table fan.

PRODUCT OVERVIEW

- | | |
|---------------------|------------------|
| 1. Front grill | 7. Switch |
| 2. Blade nut | 8. Motor housing |
| 3. Blade | 9. Base |
| 4. Grill nut | 10. Pole nut |
| 5. Rear grill | 11. Safety screw |
| 6. Oscillating knob | |

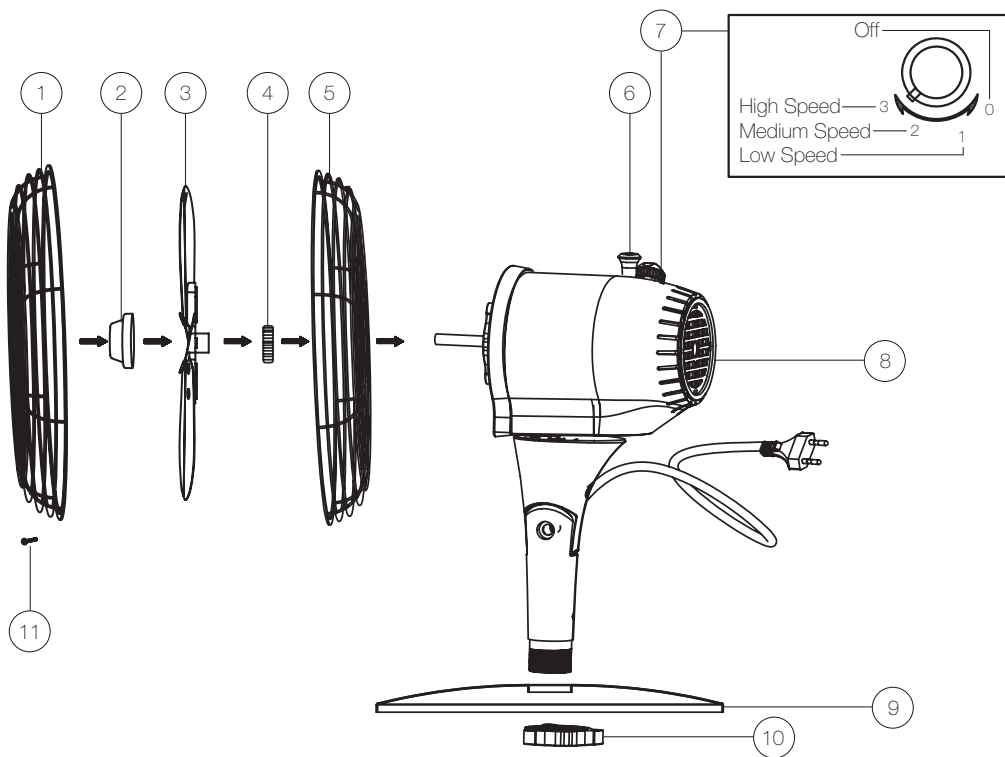

1. Pick up the motor housing (8). Remove the pole nut (10) from the supporting pole. Align and insert the supporting pole into the hole of the base (9), fasten it with the pole nut (10).
2. Remove the blade nut (2) and grill nut (4) from the motor shaft. Assemble the rear grill (5) into the motor housing (8). Fix it by the grill nut (4).
3. Assemble the blade (3) on the motor shaft and secure it with blade nut (2).
4. Put the front grill (1) onto the rear grill (5). Fixing it with the grill clips and then fasten the safety screw (11).
5. Now you are ready to use your fan!

OPERATION

Operation

1. Connect the fan to an electrical outlet (220-240V AC, 50 Hz).
2. Rotate the switch (7) to desired air flow.
 - 1: Low speed
 - 2: Medium speed
 - 3: Fast speed
 - 0: Off
3. Push the oscillating knob (6) for oscillation and pull the oscillating knob for fixed position.
4. The airflow can be adjusted upward or downward by simply moving the motor housing up or down.

Cleaning

- Always turn off and disconnect the power cord from the socket before carrying out any cleaning operation.
Warning! After assembly, never remove the grills for cleaning or maintenance.
- Use a moistened cloth (not wet) to remove dirt from the surfaces.
- Never immerse the fan in water or any other liquid.
- If the fan is not used for a long period of time, protect it with suitable cover after cleaning and store it in a dry place.

SPECIFICATIONS

Model number	530055
Power supply	AC 220-240 V, 50 Hz
Effect	45 W
Cord length	1.6 m
Dimensions	35 x 27 x 44 cm
Weight	3 kg

OTHER INFORMATION

Environment

This symbol on the product or in the instructions means that the electrical and electronic equipment must be disposed of separately from other household waste when it does not work anymore.

The EU has separate waste collection systems, contact your local dealer or authority for more information.



This symbol on the products packaging means that the material is recyclable.



Safety

This mark is printed on the product and in the manual to show that it has been produced according to current regulations within the EU legislation.



Reservations

We reserve the right to correct any typographical errors, and reserve the right to make ongoing changes and improvements to the product and related materials.

